

PVC Strip Curtain Installation Guide

PVC Strip Curtain Contents:


- Suspension Rail(s) – To suit opening width (supplied in full lengths of either 984, 1230, 1476 or 1968mm – please cut to exact required size on site).
- Ready to Hang PVC Strips – cut to length supplied.

Each kit is provided with over coverage of approx. ½ PVC Strip to ensure the opening is covered fully by PVC. Each strip is cut approx. 100mm longer than the opening size, once fitted the strips should be left to hang for 24 hours (this allows the strips to settle). Once the strips have settled they can be trimmed to the actual size required using a sharp knife.



Installation Instructions:

- Fit the Suspension Rail(s) to the opening using the appropriate fixings (not included)
- When the Suspension Rail(s) are fitted then proceed to hang the Strips as listed below.

The Ready to Hang PVC Strips must be attached correctly as detailed below to ensure that the PVC creates a seal as shown in Fig. 1.

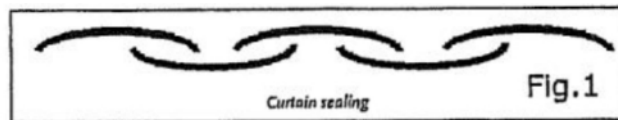

- Place the first PVC Strips on the hook on the Suspension Rails with the required number of free hooks between the Strips according to the overlap table (shown in Fig. 2).

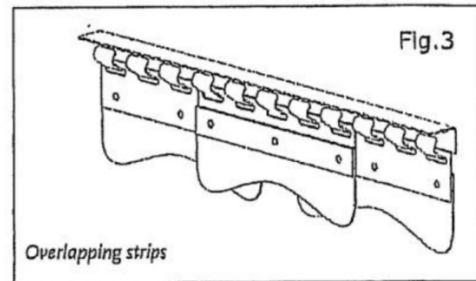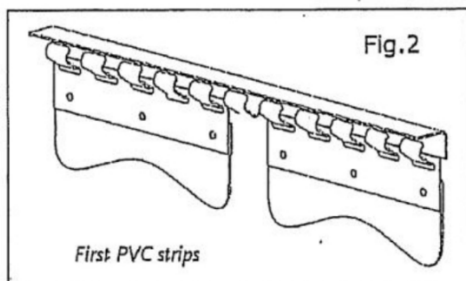

- Place the first PVC Strips on the hook on the Suspension Rails with the required number of free hooks between the Strips according to the overlap table below. Please ensure that the plates are facing the correct way as shown in Fig. 2.
- Place the second row of strips on to the hooks with the first starting on the left hand side, the first strip must then be placed with the number of empty hooks as used above remaining free
- Proceed to place the remaining strips whilst still keeping the hooks between each strip free.

Strip Width	Overlap %	Overlap Type	Free Hooks
200mm	36%	Minimum	3
200mm	77%	Medium	1
300mm	36%	Minimum	5
300mm	63%	Medium	3